



INSTRUCTIONS FOR USE

A-dec 561 Cuspidor

Copyright

© 2020 A-dec Inc. All rights reserved.

A-dec Inc. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. A-dec Inc. shall not be held liable for any errors contained herein or any consequential or other damages concerning the furnishing, performance or use of this material. The information in this document is subject to change without notice. If you find any problems in the documentation, please report them to us in writing. A-dec Inc. does not warrant that this document is error-free.

No part of this document may be copied, reproduced, altered, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system, without prior written permission from A-dec Inc.

Trademarks and Additional Intellectual Property Rights

A-dec, the A-dec logo, A-dec 500, A-dec 300, Cascade, Cascade Master Series, Century Plus, Continental, Decade, ICX, ICV, Performer, Preference, Preference Collection, Preference ICC, and Radius are trademarks of A-dec Inc. and are registered in the United States and other countries. A-dec 400, A-dec 200, Preference Slimline, and reliable creative solutions are also trademarks of A-dec Inc. None of the trademarks or trade names in this document may be reproduced, copied, or manipulated in any manner without the express, written approval of the trademark owner.

Certain touchpad symbols are proprietary to A-dec Inc. Any use of these symbols, in whole or in part, without the express written consent of A-dec Inc. is strictly prohibited.


Regulatory Information

Regulatory information mandated by agency requirements is provided in the *Regulatory Information, Specifications, and Warranty* document (p/n 86.0221.00), which is available in the Document Library at www.a-dec.com.

Product Service


Product service is available through your local authorized A-dec dealer. For service information, or to locate an authorized dealer, contact A-dec at 1.800.547.1883 in the USA and Canada or 1.503.538.7478 worldwide, or visit www.a-dec.com.

CONTENTS

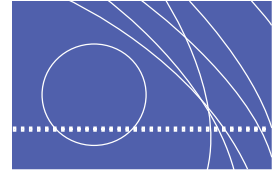

1 Introduction.....	1
About Your A-dec Cuspidor.....	1
2 Basic Operation	3
Power.....	3
Power Button	3
Master Toggle	3
Alternate Master Toggle Locations.....	4
Cuspidor Functions	4
Customize Bowl Rinse or Cupfill Timing.....	5
Additional Touchpad Functions	5
Stop Switch	6
Bowl Rinse Flow Adjustment	7
3 Adjustments and Maintenance	7
Utilities	8
Spouts and Bowl.....	9
Gravity Drain Tubing.....	9
Barrier Protection.....	10
Waterline Treatment	10
4 Appendix: Specifications and Warranty	11
Specifications.....	11
Minimum Air, Water, and Vacuum Service Requirements	11
Maintenance Parts	11
Warranty	11

INTRODUCTION

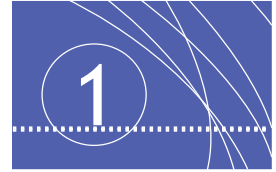

Thank you for choosing A-dec equipment. This guide contains basic operating instructions, adjustments, and maintenance for the A-dec 561 cuspidor.

About Your A-dec Cuspidor


The A-dec 561 cuspidor is designed for simple operation and easy cleaning. Manual and programmable controls are available either from the buttons on the cuspidor tower (Figure 2 on page 2) or from the optional touchpad.

For an overview of component features and options covered in this guide, see Figure 2.

Figure 1. A-dec 561 Cuspidor and Support Center



Figure 2. A-dec 561 Cuspidor Features

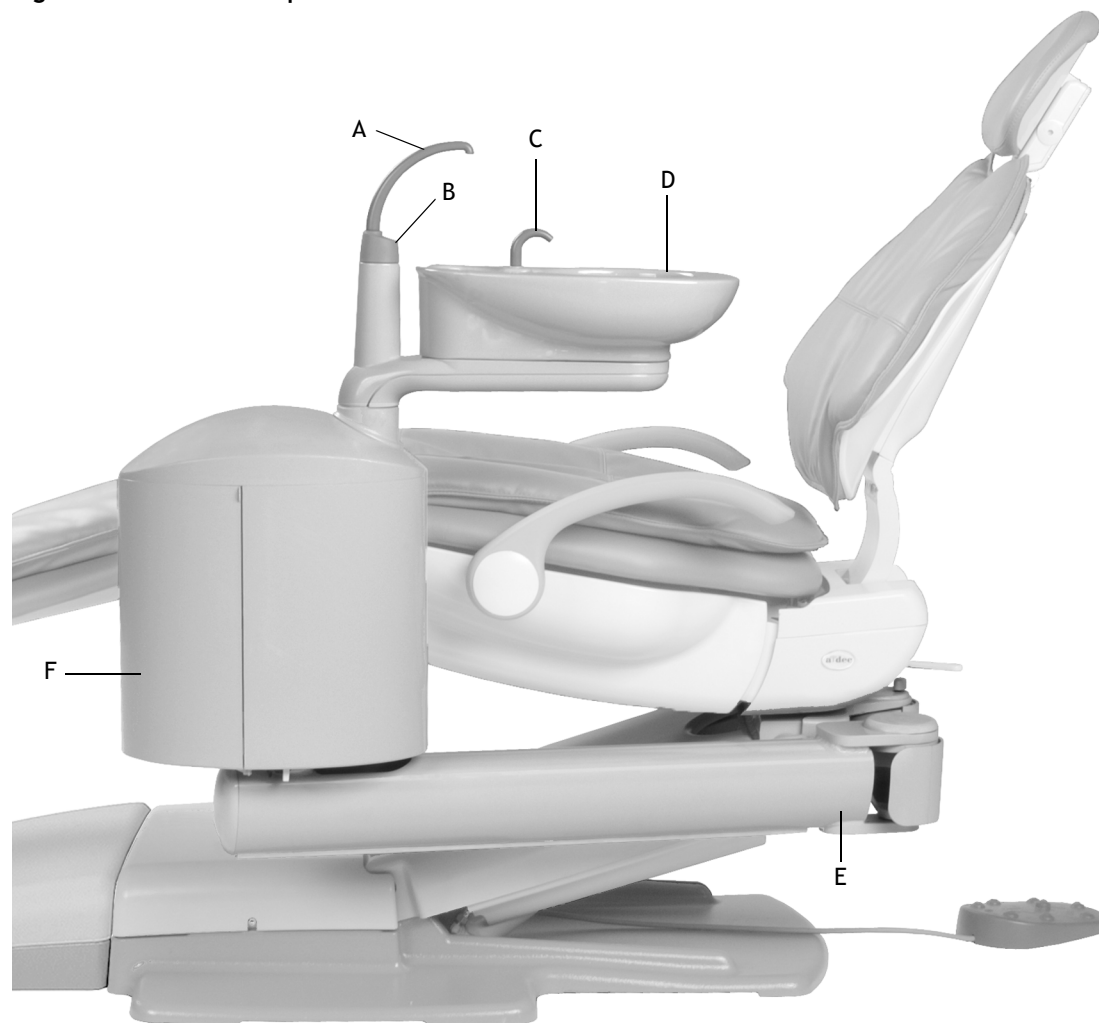

Item	Description
A	Cupfill Spout
B	Cuspidor Buttons
C	Bowl Rinse Spout
D	Cuspidor Bowl
E	Lower Support Arm
F	Support Center

BASIC OPERATION


Power

There are two power source locations for the assistant's instrumentation: the power button on the chair and the delivery system master toggle.

Power Button

The power button is located on the base of the chair (see Figure 3). When the button is pressed in, the chair and any attached systems have power. When the button is out, the system has no power.


Figure 3. Chair Power

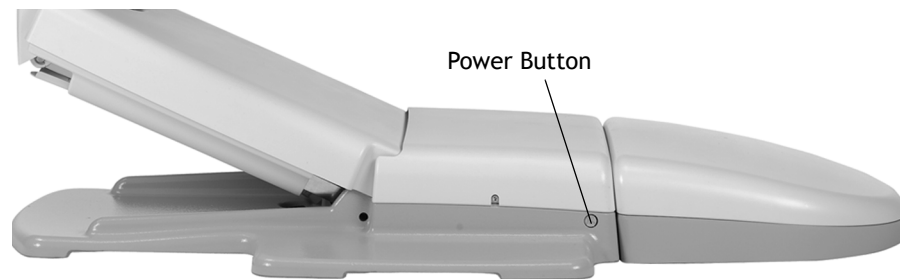

Master Toggle

The master toggle is located on the right side of the delivery system and controls the utilities for the system, as well as other modules mounted to the chair (see Figure 4). Flip the toggle to turn the system on or off.

Figure 4. Master Toggle Location

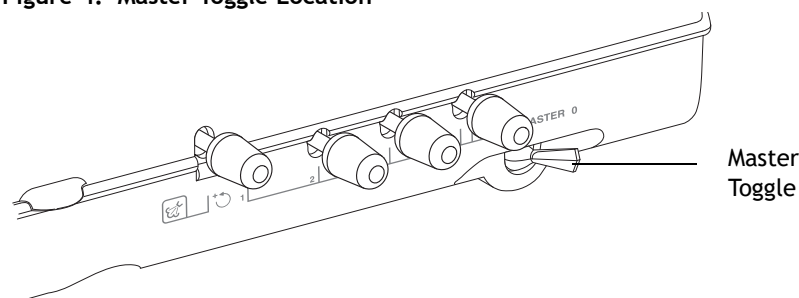

NOTE To prolong the life of your equipment, turn off the master toggle when the delivery system is not in use.

Alternate Master Toggle Locations

Depending on your configuration, the master toggle may instead be located on the cuspidor, support center, or remote floor box.

Cuspidor Functions

You can use the buttons under the cupfill spout or on the touchpad to control the bowl rinse and cupfill functions. The buttons support both programmed and manual operation.

Figure 5. Cuspidor Features and Controls







 


Table 1. Cupfill and Bowl Rinse Buttons

Button	Description
 or 	<p>Cupfill Button: Controls water flow from the cuspidor into a cup.</p> <ul style="list-style-type: none"> Press the cupfill button for a timed operation. The factory preset is a 2.5 second fill. Press and hold the cupfill button for manual operation.
 or 	<p>Bowl Rinse Button: Provides rinse water for the cuspidor bowl.</p> <ul style="list-style-type: none"> Press the bowl rinse button for a timed operation. The factory preset is a 30 second rinse. Press and hold the bowl rinse button for manual operation.

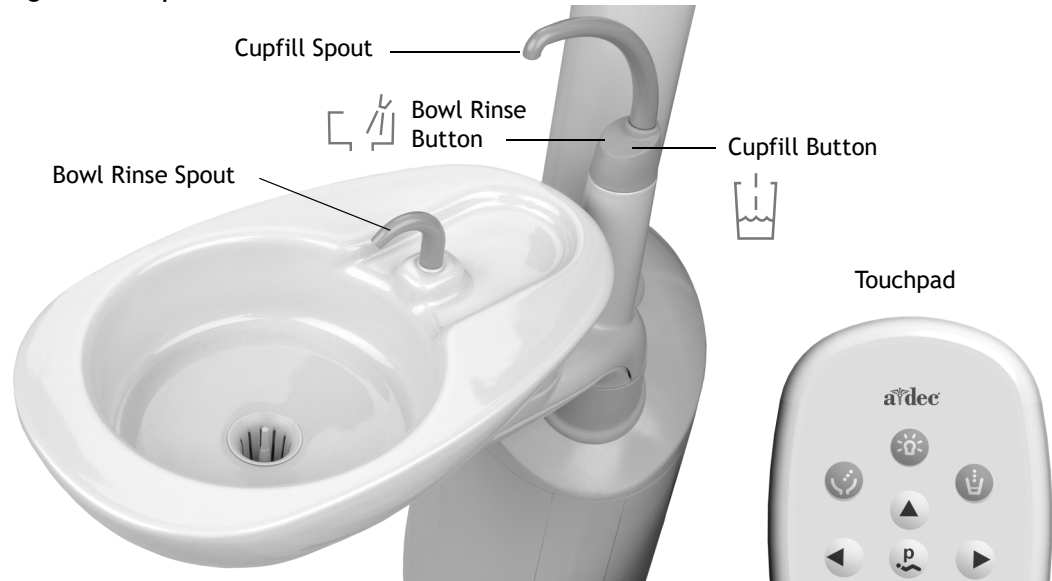
Note: Touchpad symbols are proprietary to A-dec Inc.



TIP Press the bowl rinse button ( or ) twice in less than two seconds to activate the continuous operation mode. Press the button once to end the continuous bowl rinse mode.

Customize Bowl Rinse or Cupfill Timing

To reprogram the timed bowl rinse or cupfill functions:

1. Press  on the touchpad, or press and hold the cupfill and bowl rinse buttons under the cupfill spout. Release the button(s) when you hear one beep.
2. Within five seconds, press and hold the cupfill or bowl rinse button for the desired time.
3. Release the button. Three beeps confirm that the program has changed.

Additional Touchpad Functions

Your system may include a standard or deluxe touchpad.



IMPORTANT For complete touchpad functionality instructions, see your delivery system *Instructions for Use*.

Figure 6. A-dec 500 Touchpads



Standard

Deluxe


Stop Switch

If an object becomes lodged under the cuspidor as the chair is lowered, a stop switch will interrupt the chair motion to prevent damage.



NOTE Please follow standard patient care precautions when using the chair preset position functions. Always take extra care with small children and patients with limited mobility. To stop the chair at any point, push any chair positioning button on the footswitch or touchpad.

ADJUSTMENTS AND MAINTENANCE

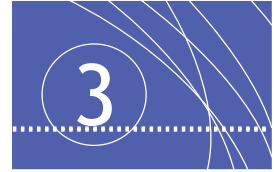


Bowl Rinse Flow Adjustment

Adjustments to the cuspidor bowl rinse flow are made inside the support center. For access inside the support center, remove the side cover by pulling the lower edges of the cover out. To adjust the bowl rinse water flow:

1. Locate the pinch valve inside the support center (see Figure 7).
2. With the bowl rinse on, squeeze the pinch valve to reduce the flow. Release the valve to increase the flow. Ensure that the water flow adequately rinses the bowl.
3. For the best rinsing action, adjust the flow pattern by rotating the bowl rinse spout.

Figure 7. Adjusting Bowl Rinse Water Flow

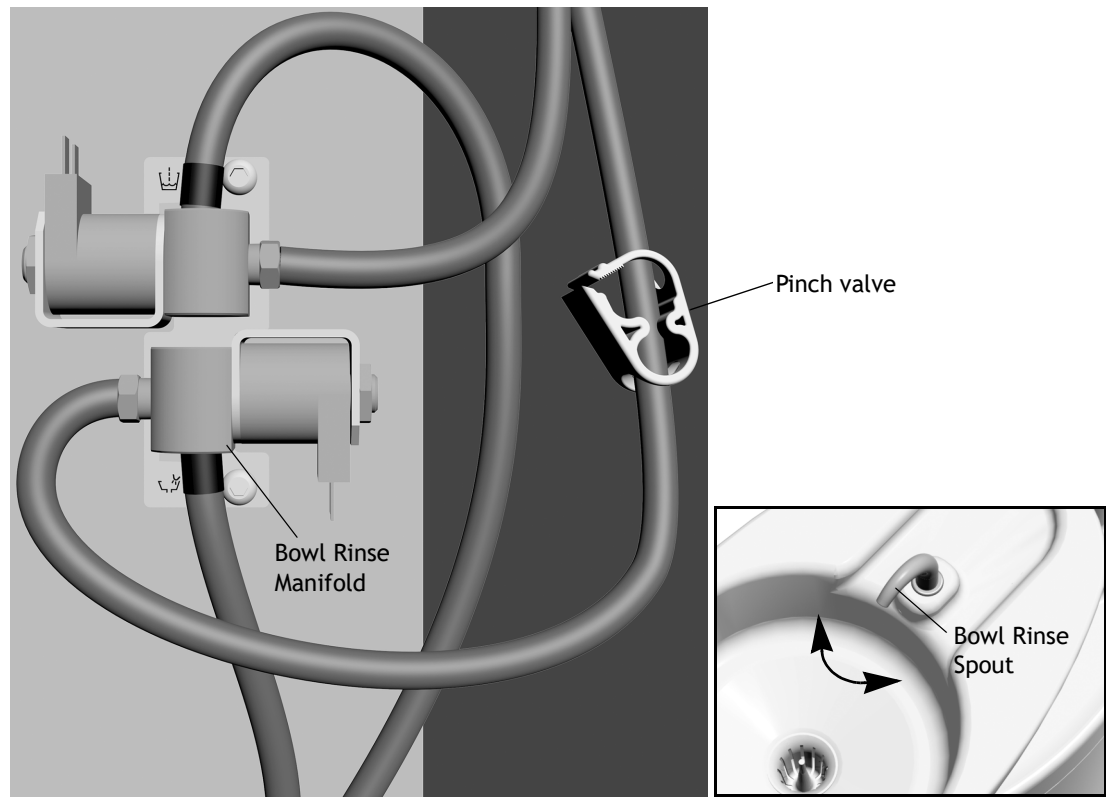


Utilities

A-dec 500 utilities are located in the contoured floor box for chair-mounted systems or in the cabinet for cabinet-mounted delivery systems. To access the utilities, lift up the floor box cover or removable cabinet panel. The utilities include the air/water shutoff valves, filters, pressure pre-regulators, vacuum and gravity drains, as well as electrical outlets (see Figure 8).



IMPORTANT For information on utilities adjusting and maintaining, see your delivery system *Instructions For Use*.

Figure 8. System Utilities (shown in floor box)

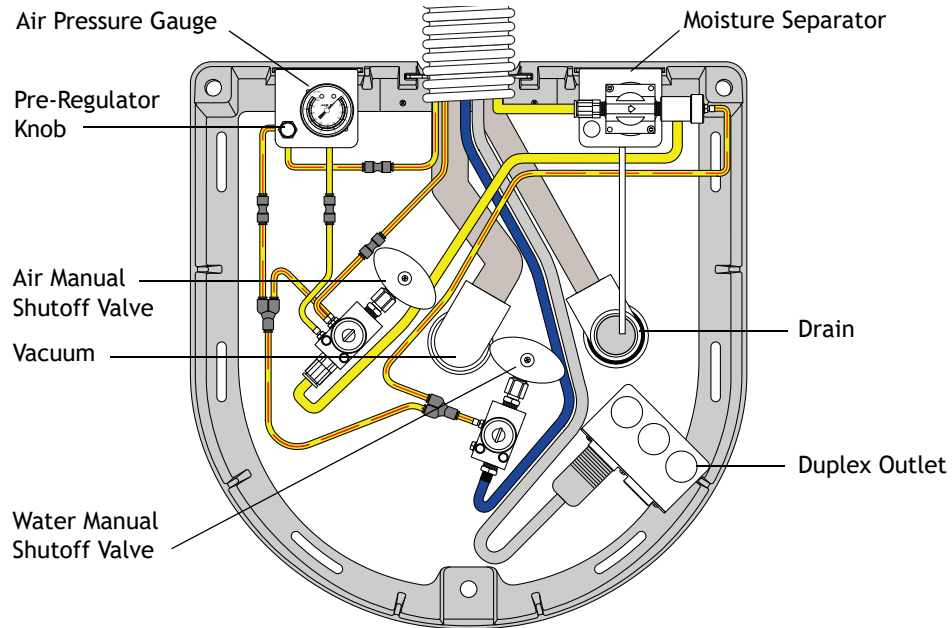

Spouts and Bowl

The contoured spouts and smooth bowl of the cuspidor provide for quick and easy cleaning. Remember to empty and clean the bowl screen every time you clean the cuspidor.



BIOHAZARD Infectious waste may be present. Follow asepsis protocol to prevent cross contamination.



CAUTION Do not remove the spouts when cleaning the cuspidor. This will help prevent cleaning solutions from damaging the equipment and contaminating the cupfill water.



CAUTION Do not empty the solids collector screen or bowl screen into the cuspidor. Doing so could plug the cuspidor drain. Dispose of the contents in an appropriate biohazard container according to the regulations specific to your location. After cleaning, always install the bowl screen in the cuspidor bowl to prevent debris from plugging the drain.


Gravity Drain Tubing

At the end of each day, flush the cuspidor to remove debris from the flexible drain tubing. If the cuspidor is not flushed regularly, debris may build up and impair draining. To flush the cuspidor, run the bowl rinse for about 60 seconds.

Barrier Protection

A-dec recommends barrier protection for all applicable touch and transfer surfaces. Touch surfaces are areas that come into contact with hands and become potential cross-contamination points during dental procedures. Transfer surfaces are areas that come into contact with instruments and other inanimate objects.

In the USA, barriers must be produced under the Current Good Manufacturing Practice (CGMP) as specified by the U.S. Food and Drug Administration (USFDA). For regions outside the USA, refer to the medical device regulations specific to your location.

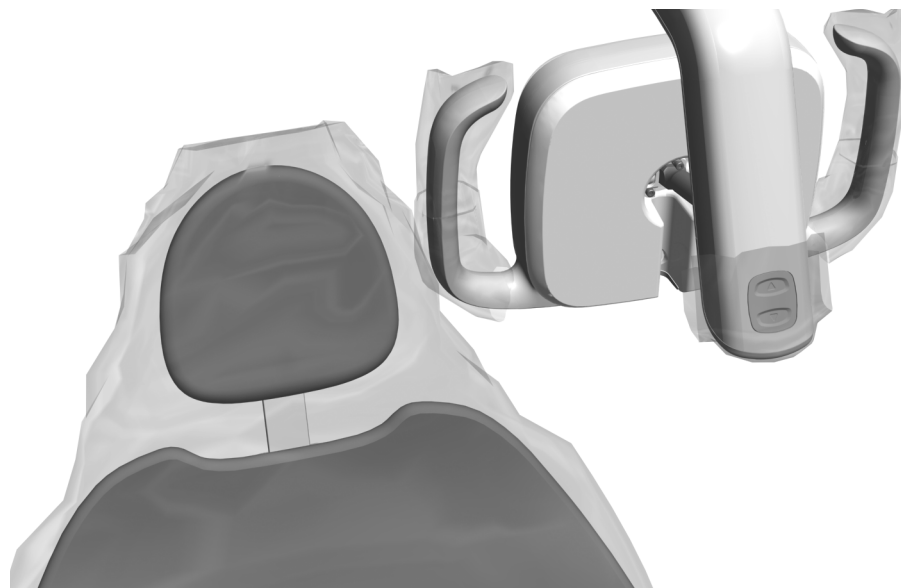

DANGER If you use barriers, always replace the barrier film after each patient.




IMPORTANT For recommendations on cleaning and chemical disinfection of touch and transfer surfaces (where barrier protection is not applicable or when barriers are compromised), please see the *A-dec Equipment Asepsis Guide* (p/n 85.0696.00). This document is also available at www.a-dec.com in the Document Library.

Waterline Treatment

For recommended treatment of your dental unit waterlines, refer to the *A-dec Self-Contained Water System Instructions For Use* (p/n 86.0609.00).

APPENDIX: SPECIFICATIONS AND WARRANTY

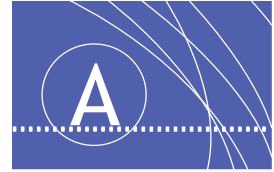

Specifications

Minimum Air, Water, and Vacuum Service Requirements

Air: 2.50 scfm (70.80 l/min) at 80 psi (551 kPa)

Water: 1.50 gpm (5.68 l/min) at 40 psi (276 kPa)

Vacuum: 12 cfm (339.84 l/min) at 8 inches of mercury (27 kPa)

Maintenance Parts

Cuspidor Bowl Screen Replacement p/n 75.0035.03 (package of 5)



IMPORTANT For electrical specifications, identification of symbols, and other regulatory requirements, see the *Regulatory Information, Specifications, and Warranty* document (p/n 86.0221.00), which is available in the Document Library at www.a-dec.com.



NOTE Specifications are subject to change without notice. Requirements may vary depending on your location. For more information, contact your authorized A-dec dealer

Warranty

Warranty information is provided in the *Regulatory Information, Specifications, and Warranty* document (p/n 86.0221.00), which is available in the Document Library at www.a-dec.com.



A-dec Headquarters

2601 Crestview Drive
Newberg, Oregon 97132
United States
Tel: 1.800.547.1883 within USA/CAN
Tel: +1.503.538.7478 outside USA/CAN
www.a-dec.com

A-dec Australia

Unit 8
5-9 Ricketty Street
Mascot, NSW 2020
Australia
Tel: 1.800.225.010 within AUS
Tel: +61.(0).2.8332.4000 outside AUS

A-dec China

A-dec (Hangzhou) Dental Equipment Co., Ltd.
528 Shunfeng Road
Qianjiang Economic Development Zone
Hangzhou 311100, Zhejiang, China
Tel: 400.600.5434 within China
Tel: +86.571.89026088 outside China

A-dec United Kingdom

Austin House
11 Liberty Way
Nuneaton, Warwickshire CV11 6RZ
England
Tel: 0800.ADEC.UK (2332.85) within UK
Tel: +44.(0).24.7635.0901 outside UK



86.0604.00 Rev G
Date of Issue 2020-02-17
Copyright 2020 A-dec Inc.
All rights reserved.